



Quick Start Guide

IMPORTANT: Make sure before you begin your install that you REMEMBER to plug the GREEN fiber optic cable back into its factory location.

1.

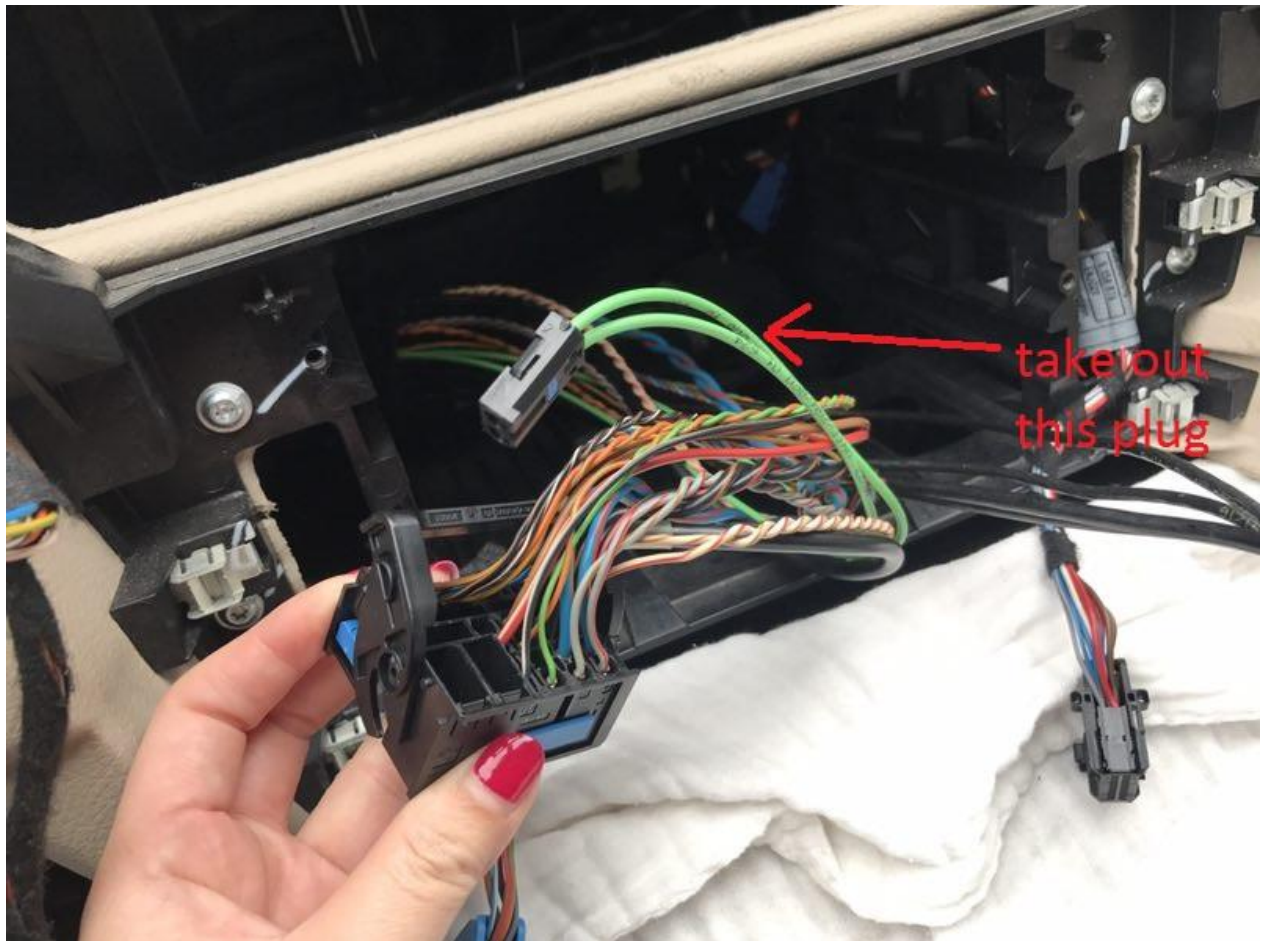

2.

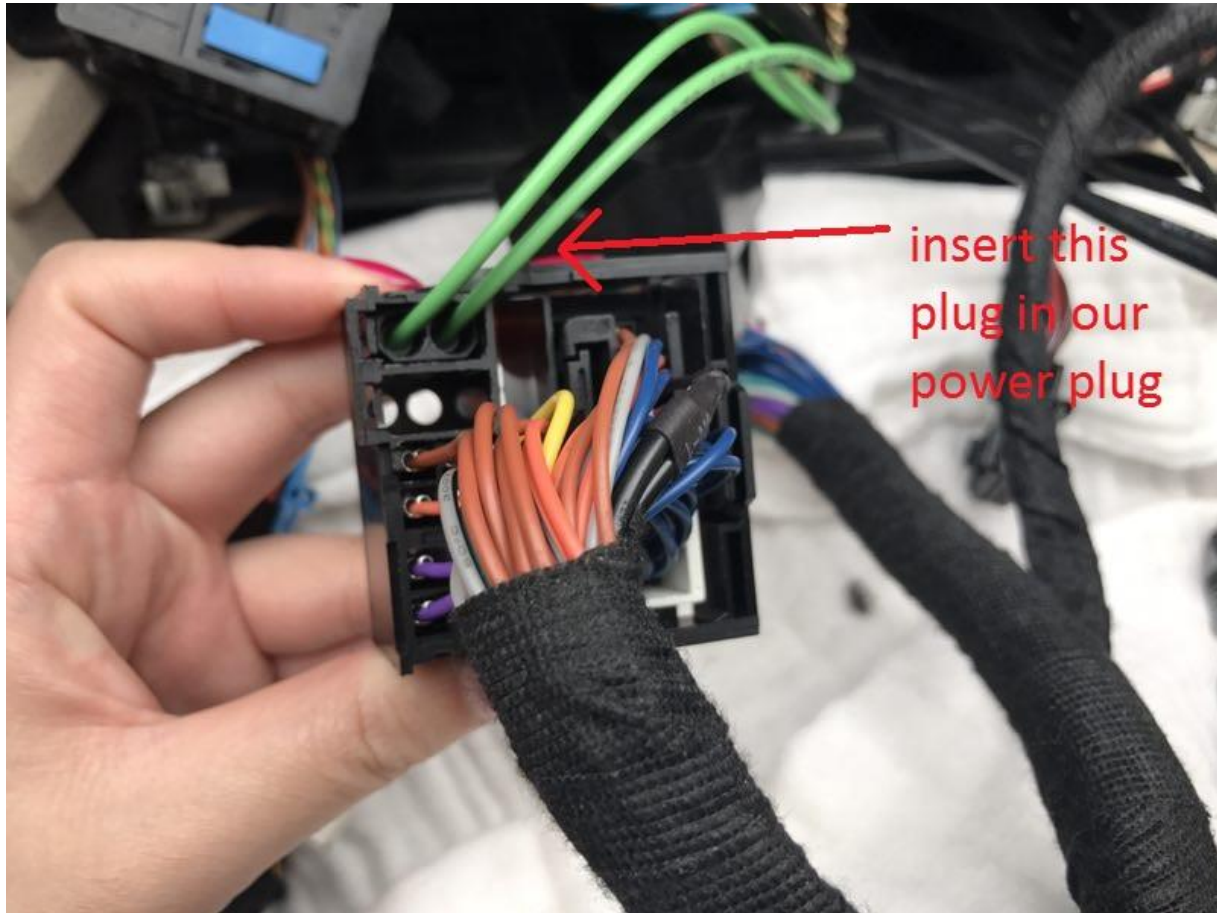

3.



No Sound from the Android Monitor?

1. You must connect a 3.5mm audio cable from the monitor to your AUX input under your armrest.



Low AUX Volume?

If the volume from AUX is a lot lower compared to the original BMW radio you must check the AUX volume in the original BMW menu settings. There you can adjust the AUX volume output.



iDrive Reboot

Symptoms: prolonged BMW screen at startup, then "NO SIGNAL" when switching to "original car," no audio, iDrive controller only partially worked in the AVIN menus, and green SOS light in headliner occasionally blinked.


Push both eject buttons (DVD and CD) and the volume knob (a.k.a the mute button) at the same time. Wait about 30 seconds for the factory system to complete its reboot.

<http://www.bimmerfest.com/forums/showthread.php?t=254420>


Change CAN TYPE

It is important that the CAN type set for your monitor matches your car model.


It is safe to try all of CAN type option. Click and hold the selection you choose for 3 seconds to update to that CAN type.

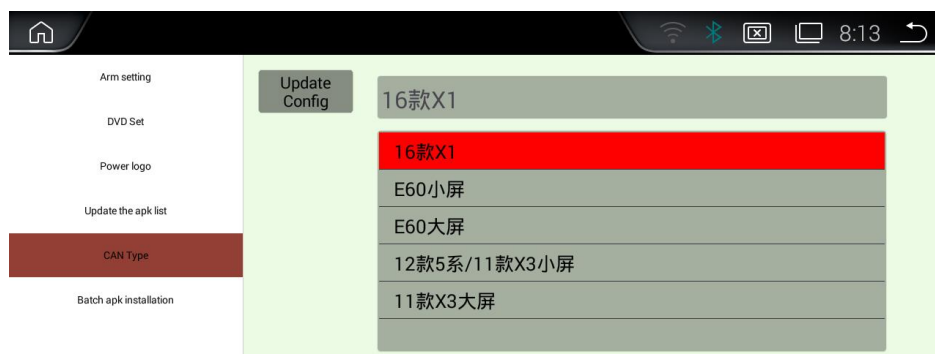

Switching sound output between AUX and TV

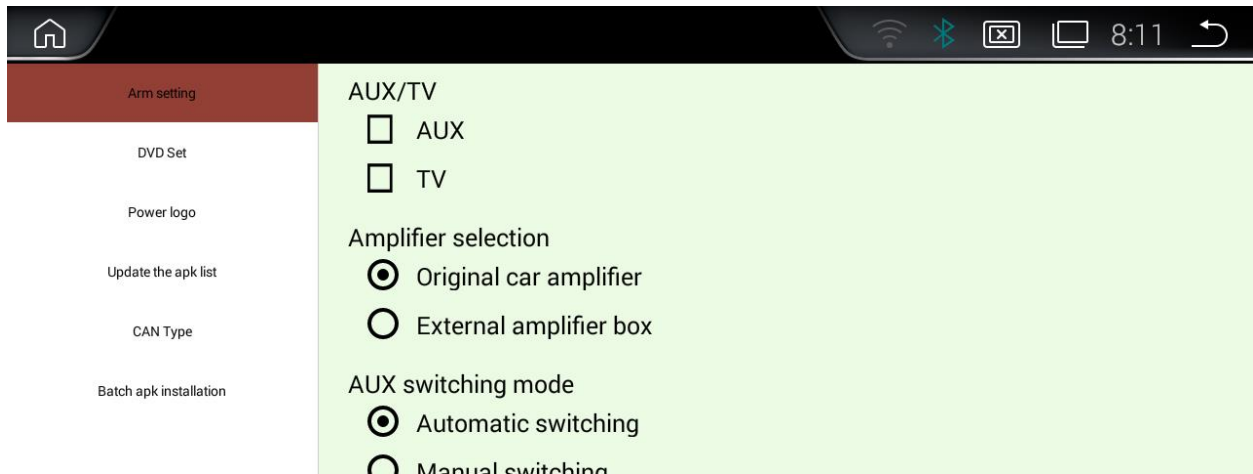


Factory Password = 1314

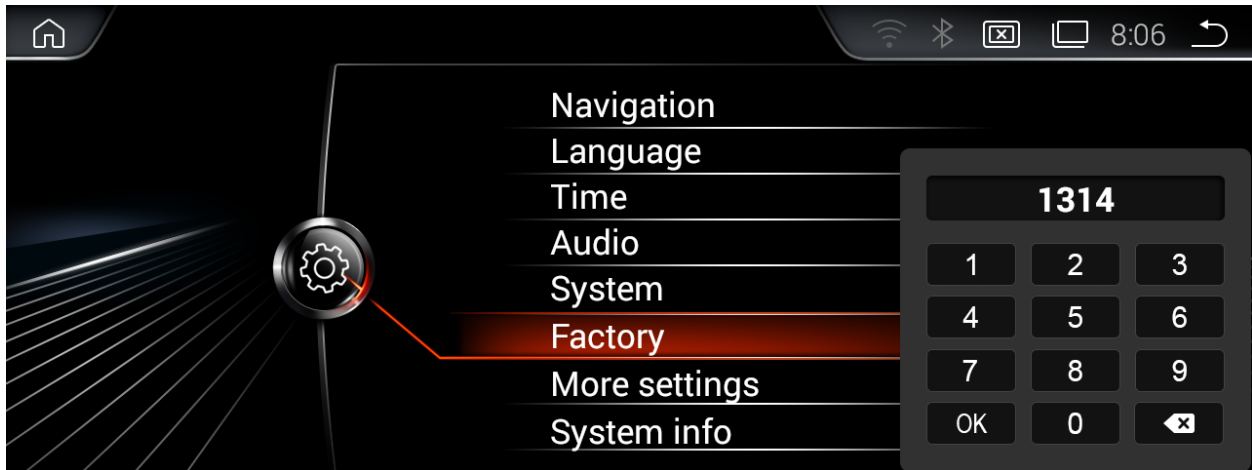

Date and Time setting – Time Zone


Before you get started make sure the date and time is set correctly for the unit. This will save you from a lot of issue later including with Google Play app store that requires the date and time to be correct for it to work.

1. Go to “Time” and then change the settings to “Original Time”

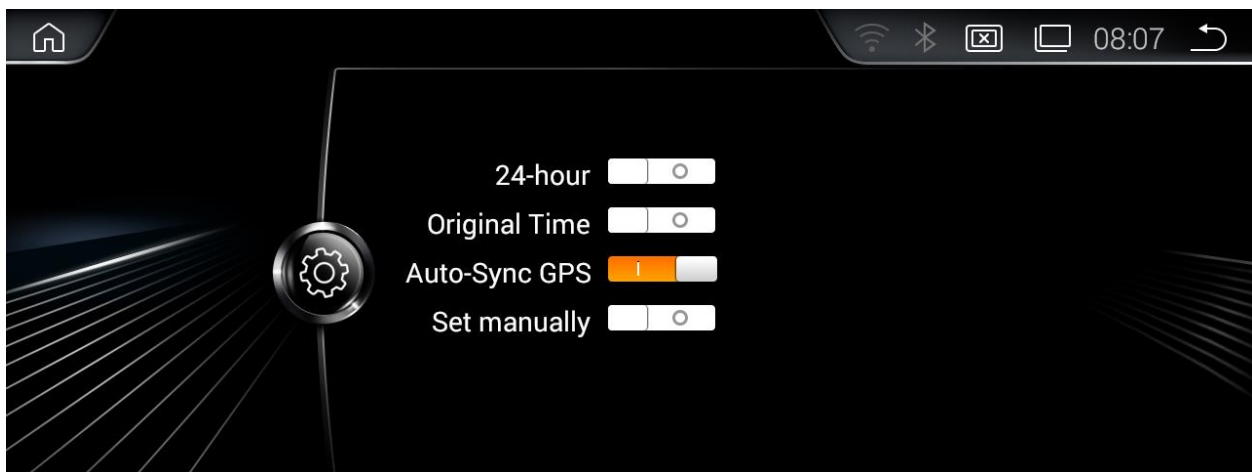

2. Go to “More settings” – Date & Time
 - a. Set the correct Time Zone for your area


Now your clock should be set and remembered each time you restart the unit.

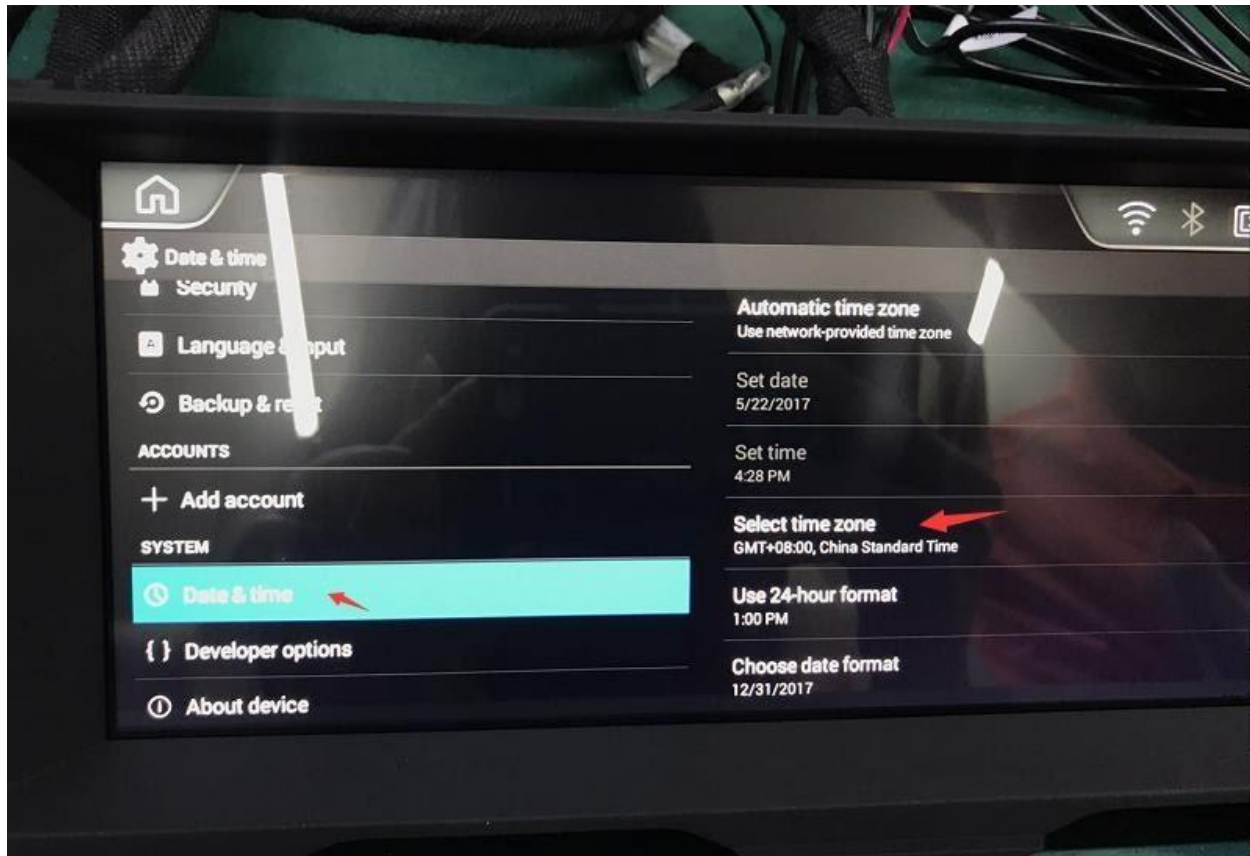

Change to the BMW EVO user interface.

1. Go to “Factory” settings enter password = 1314
2. Go to “Arm setting” and on the right of the screen use your finger to scroll UP the screen until you see “Modes set” and select


“BMW-EVO

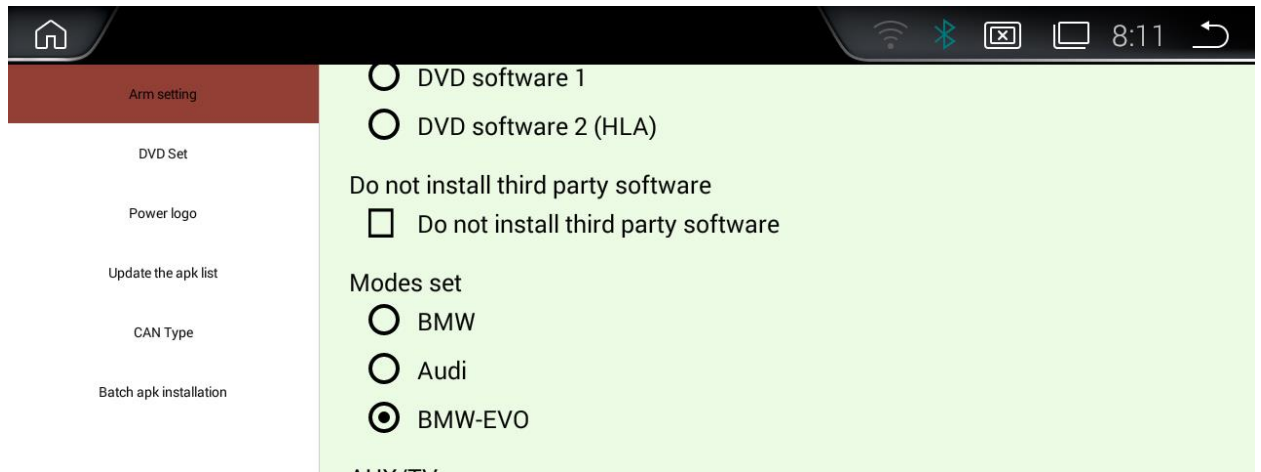


3. Afterwards your UI will be changed to the one below.



Change UI Language

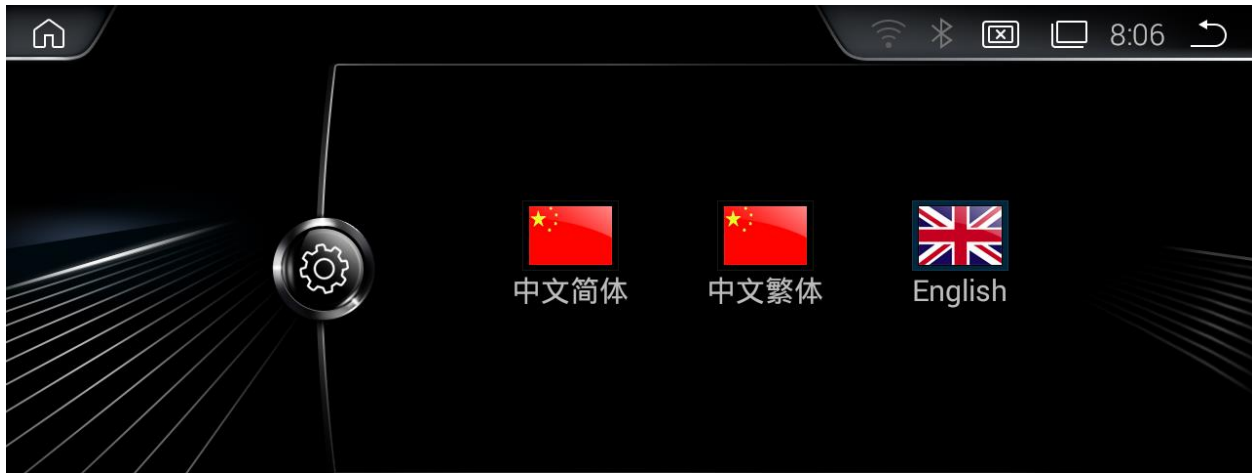


Set default navigation app to open.

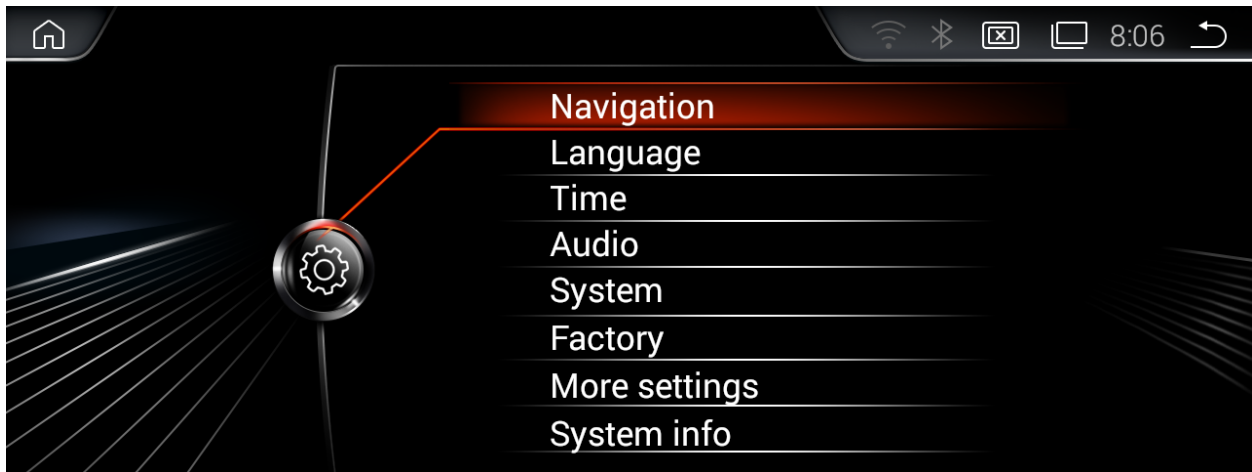

Change DVR settings

1. If you have a CVBS (RCA) DVR camera select: CVBS DVR

2. If you have a USB DVR camera select: USB DVR

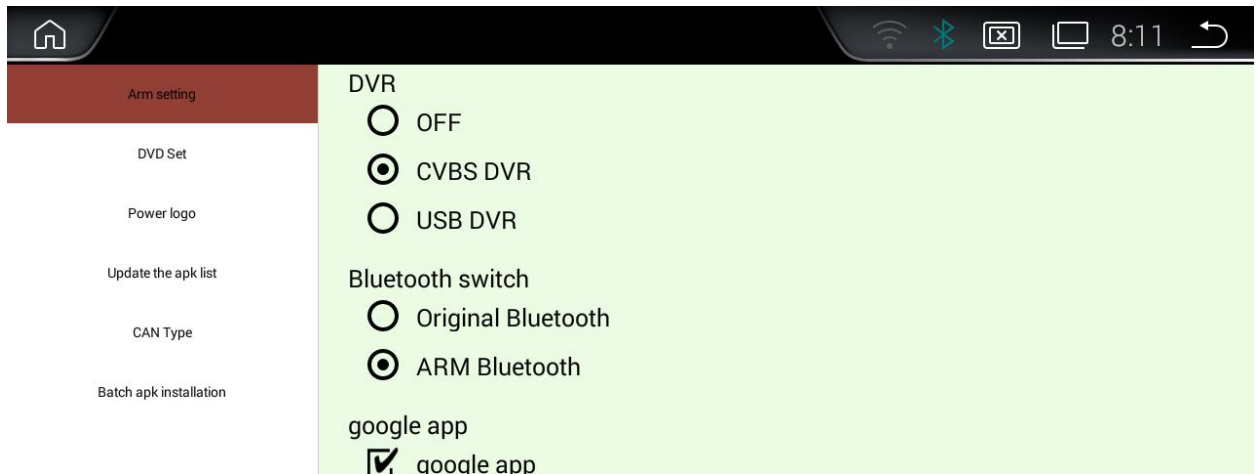

Other system settings

